


OCEANSOUTH 4 BOW BIMINI INSTRUCTIONS

COMPONENTS (INCLUDED IN BOX)




ASSEMBLY INSTRUCTIONS

STEP 1.
FIT CROSSBARS INTO STARBOARD FRAME

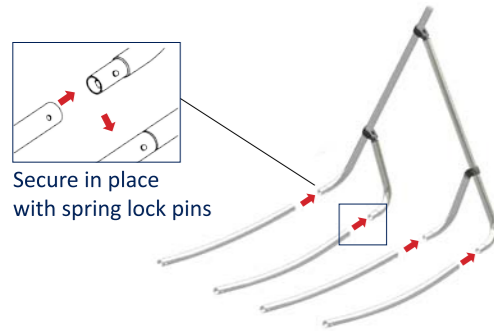

STEP 2.
FEED THE CROSSBARS THROUGH THE FABRIC SLEEVES

a. STARBOARD FRAME

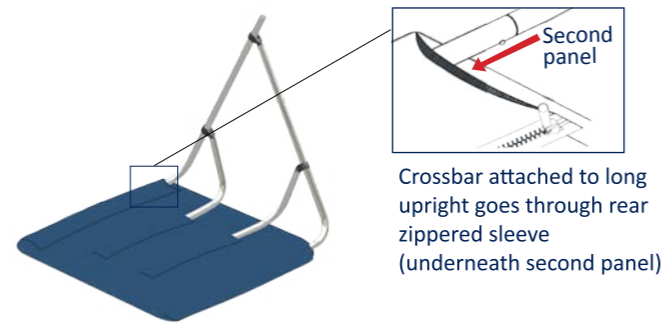


b. PORT FRAME



STEP 3.
ATTACH WEBBING STRAPS TO BIMINI. (4 places)



STEP 4.
HEIGHT ADJUSTMENT.
The bimini is now assembled. Before mounting, you may trim the bimini for your optimal height. Trimming the bimini and reducing the height will significantly increase stability.

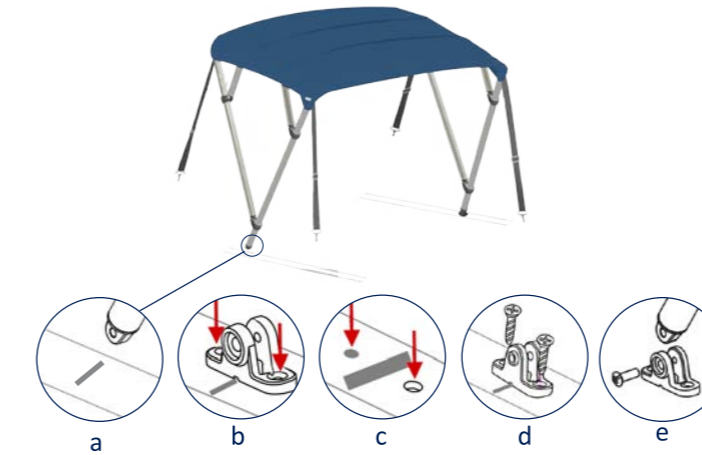

STEP 5.
ATTACH BIMINI TO BOAT
a. Mark the attachment positions (2 places for deck mounts) Keep Bimini level whilst marking.
b. Center **Deck Mount** over marked position.

N.B. Make sure the **Deck Mounts** "lean" is towards the inside of the boat.

c. Drill holes for **Deck Mounts** on marked positions to suit screws used.

N.B. The type of screw used will be determined by the construction of your boat (gunwale).

d. Fit the **Deck Mounts**. (2 places)
e. Attach the bimini to **Deck Mounts**. (2 places)

STEP 6.
ATTACH SADDLES TO THE BOAT (4 PLACES)



a. Mark the attachment positions. (4 places)
b. Drill holes for Saddles on marked positions to suit screws used. (8 places)
c. Secure saddles in place. (4 places)

N.B. The type of screw used will be determined by the construction of your boat

STEP 7.
ADJUST WEBBING STRAPS TO TENSION THE BIMINI




INTEGRATED STORAGE BOOT INSTRUCTIONS

STEP 1.
RELEASE THE SNAP HOOK



STEP 2.
UNZIP PANEL ON THE REAR POCKET TO RELEASE STORAGE BOOT PANEL.

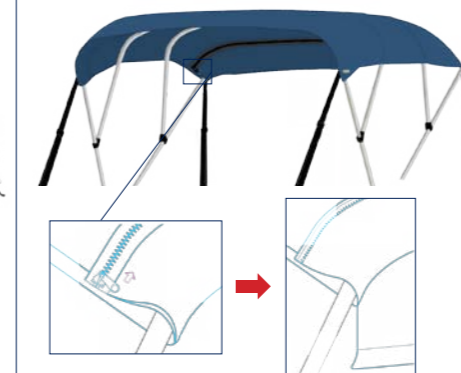

STEP 3.
FOLD THE BIMINI



STEP 4.
FOLD PANEL OVER BIMINI TOP & WEBBING STRAPS

